



CE-9807RSRK JK WRANGLER & UNLIMITED REAR SHOCK RELOCATOR KIT INSTALLATION INSTRUCTIONS & TECHNICAL MANUAL



Fits


Fits: Rear of 2007-2018 Jeep JK Wrangler & Unlimited


Kit Includes

- 2) CE-9807RSRS - Spacers
- 2) EE-5164CH8 - 1/2"-20 x 4" Bolts
- 2) EE-51ALNC - 1/2"-20 Stover Nuts
- 4) EE-50WSAEH - 1/2" Washers

Instructions

- 1) Remove the bottoms of your shocks from the factory shock mounts on the axle housing.
- 2) Install the steel tube spacer sleeve into the factory bracket where the shock just was.
- 3) Move the shocks to the outboard side of the shock mounts on the axle housing.
- 4) Using the new, supplied bolts, bolt the shock mount, the new steel sleeve and the shock together as shown below. Use one washer under the bolt head and one under the nut.

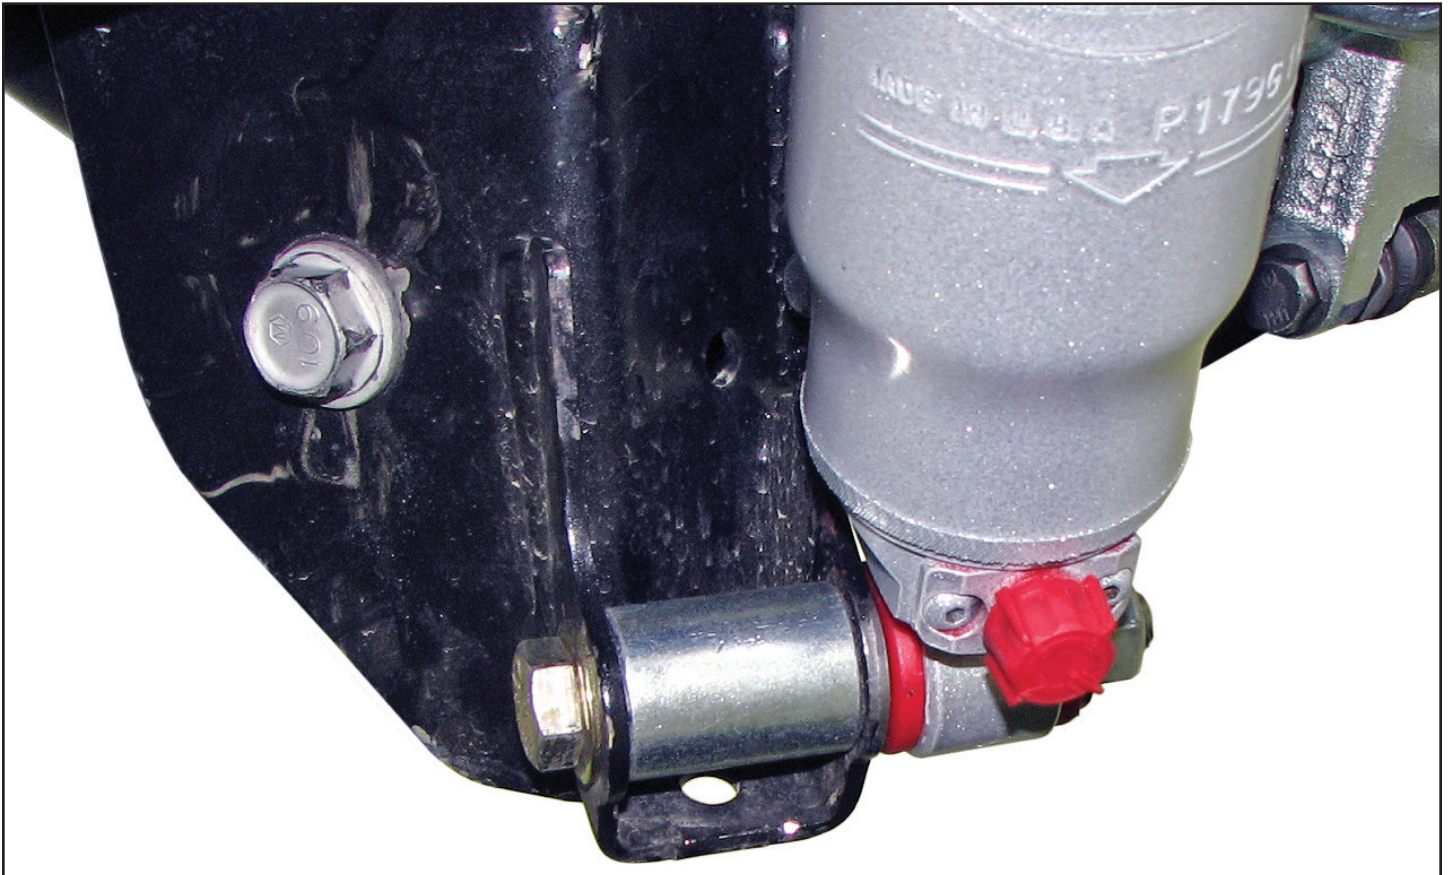

 @RockJock4x4

 /RockJock4x4

 /RockJock4x4byJohnCurrie



1592 Jenks Dr.
Corona, Ca. 92878
(714) 367-1580